



Credit: Harald Pettersen - Statcoi

## Standalone DIFF System (Air Driven Pump)


A Deck Integrated Fire Fighting (DIFF) system is an effective fire suppression system that is normally the primary firefighting system on a helideck. The compact design of the system also allows it to be easily installed in storage areas and hangars used for aircrafts and helicopters. This versatile system can also extinguish a pool fire by mixing foam in the water at a specified flow, should the need arise.

### SYSTEM DESIGN

The Firenor standard design of the DIFF system was developed based on decades of firefighting industry experience. The system connects the water supply to a series of open pop up nozzles through a network of dry pipework. A traditional on-off valve normally prevents the water from flowing through the pipes when the system is not in use, though Firenor can install a pressure regulating deluge valve if the water supply requires one. Instrumentation and valves on the Firenor DIFF system are designed to allow for hassle-free operation, maintenance, and testing. The Firenor DIFF system can all be custom built to meet specific project requirements. Custom built systems will always be compliant with any required safety integrity level and full flow pre-tested before delivery. In this system, water is stored inside an atmospheric tank. When water is needed, the compressed gas stored in high pressure cylinders will drive a pneumatic pump which will deliver required water flow.

### VERIFICATION

Every system can be customized, upon request, for compliance with applicable rules, regulations and project specific requirements. Full documentation for any tailor-made products are available and include all necessary certifications, third party verifications such as DNV/GL, BV, ABS, etc., and full scale test reports, if required.

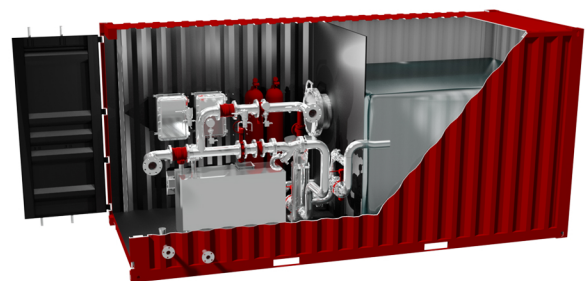

Standalone DIFF System with Air Driven Pump



## ◀ Standalone DIFF System (Air Driven Pump)

### FEATURES

- Compatible with different regulation such as IALA, ICAO, CAP437, NORMAM-27 and Norsok.
- Regulating or non-regulating deluge valve
- Compatible with various hazardous area classifications and regulations (ATEX, UL, CSA etc.)
- Compatible with IEC 61508 for Safety Integrity Level 2 or 3
- Full-scale test

### MATERIAL

Every Firenor system is available in the following materials:

- Galvanized carbon steel
- Duplex
- Copper nickel
- SS316
- Super duplex
- 6Mo
- Titanium
- GRE

### FOAM SUPPLY

The foam supply for this system can be provided by a separate tank outside or inside the skid, or from a central foam system, depending on the exact project specifications. The foam can be mixed with a variety of solutions listed below:

- Turbine foam proportioner
- Balanced pressure foam proportioner
- Foam inductor
- Constant flow orifice

### NOZZLES

Both the recessed mounted nozzles and ring main nozzles are available in several sizes and materials. The nozzle is designed to allow easy maintenance from the top and has a special feature for pressure testing of the pipe system after installation.

### DOCUMENTATION

The engineering department produces documentation relevant to all phases of the project. Documentation normally includes the following:

- Quality plan
- ITP
- Drawings
- Data sheets
- Indexes
- Procedures
- Calculations
- Certificates
- Reports
- User manual
- MRB



Firenor AS / Holskogveien 48  
4624 Kristiansand / Norway  
Office +47 99 09 73 00  
Fax +47 38 61 19 37  
E-mail sales@firenor.no

[www.firenor.no](http://www.firenor.no)