

TYFON®

The original!

From classic “honks” to complete acoustic systems

A Kockum Sonics whistle is not only high-quality design. It also contains the experience of more than 1 million TYFON® installations!

Audibility is determined not simply by the strength of sound emanating from the whistle – much more is entailed to overcome absorption, distortion and local noise. This quality is the result of more than 80 years of development. The TYFON® fulfils all current IMO and national authority regulations.

Our strength is your benefit!





The complete package

A wide range of TYFON® models is available.


Irrespective of whether one is needed for a small yacht, working boat, super tanker, bulk carrier or for a cruising vessel such as the Queen Mary, there is a TYFON® for you.

TYFON® can be electric or driven by air.

The complete package consists of an electric or pneumatically operated TYFON®, together with a signalling system consisting of a controller, bell and gong, lights etc.

TYFON®

Compressed air driven whistles suitable for all kinds of vessels. All models are equipped with low consumption electro-pneumatic valves and choke-type air flow regulators for high or low pressure air supplies. The two solenoid valves and lanyard provide three safety back-up measures with thermostat controlled heating as standard.

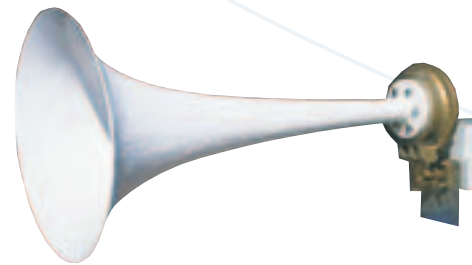

ELECTRO-TYFON®

An electrically driven sound emitter with a patented, unique, vertically extended front, to avoid excessive sound levels on the bridge (IMO) by an unsymmetrical sound distribution.



ELECTRONIC TYFON®

Driven by a twin-unit electro-dynamic special driver. The sound signal is created in the micro-computer based amplifier. A microphone can be added for use as a PA.



BELL AND GONG

Available as both electronically and electromechanically operated.



Accessories

All items required to provide an optimum signalling system, e.g. signal controller, contactor box, thermostat, all types of push buttons, filter, manoeuvre lantern etc.




Service


Kockum Sonics' world wide network of representatives and wholly-owned subsidiaries are always ready to support you with service and spare parts.

SOUND SIGNAL SURVEILLANCE

The S900 system is an external bridge wing microphones feeding amplifiers and loud speakers allow internal environmental sound monitoring. When connected to a signal controller, the system will not detect the ship's own whistle.

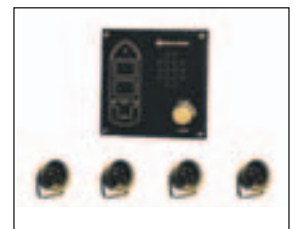

TYFON® the acoustic signalling system

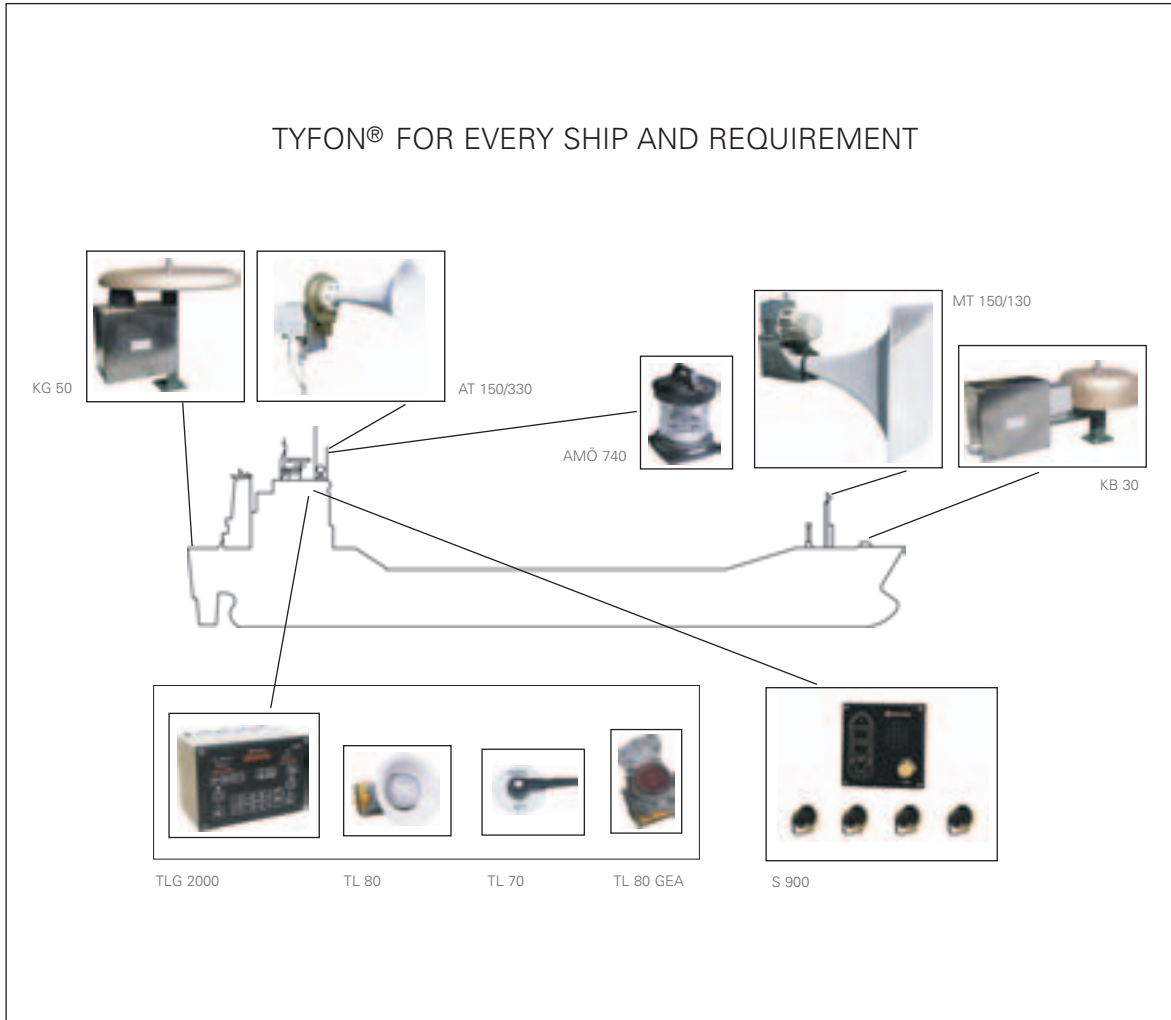

Kockum Sonics your partner in
marine service!

