



Active Oil Trawl

Active Oil Trawl is a 3 in 1 solution for the professional user.


The system consist of three different elements.

1. Guide booms for collecting the oil on water
2. Wave action pump equipped with water injection to help bringing the oil into the:
3. Floating storage tank

The floating storage tank comes in different sizes. All tanks can be disconnected from the system, sealed and towed to land for emptying. A new empty tank is connected to the system. The operation can then be carried out without interruption.

The tanks can be emptied when they are afloat. Tow the tank to the nearest pier, empty it, tow it back, connect it to the Active Oil Control system again, fill it, disconnect it, empty it.

A continuous operation is made possible with this concept.

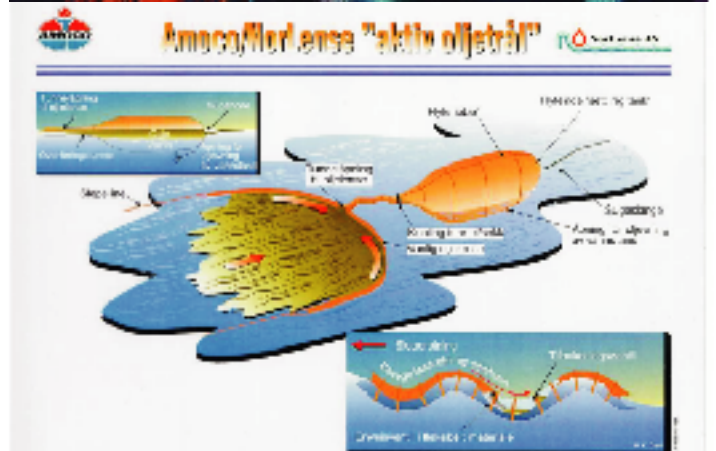

Spec.	Freeboard:	S kirt:	Length:
Active Oil Trawl guide boom	45 cm	60 cm	2 x 7,5 m To be extended with sufficient boomlengths.
Tank	Choose between 10 – 15 – 20 m ³		

