



Parat MFC

Feedwater Tank with Control Tank



Parat MFC: Feedwater Tank with Control Tank

Technical data

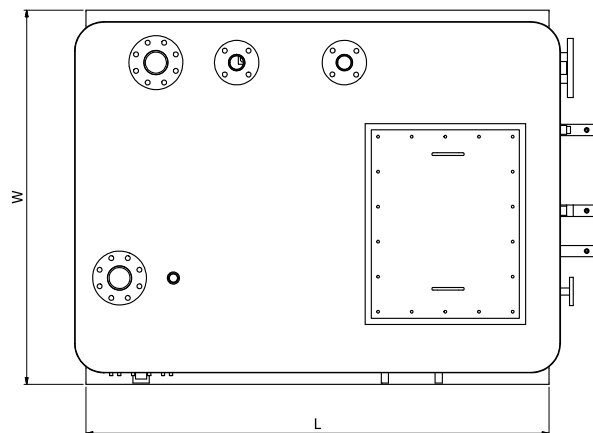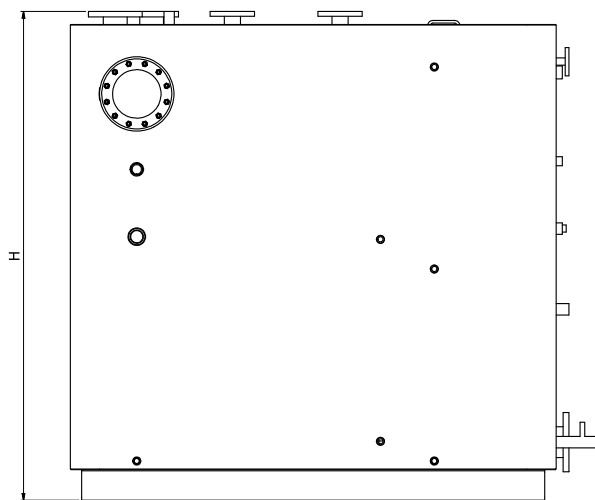

Volume (litre)	1400	2200	3000
L (mm)	1120	1420	1720
W (mm)	1240	1240	1440
H (mm)	1430	1730	1730
Weight, transport (kg)	850	950	1200
Weight, filled (kg)	2250	3150	4200

We reserve the right to make changes.

- Compact solution
- Integrated control tank with inspection glass
- Salinometer/oil in water alarm is optional
- Rugged design for marine use

With 40 years experience in marine boiler systems we have developed a “two in one solution” feed water tank. Condensate is received in the integrated control tank where impurities can be detected and removed.

The main section of the tank comprises the feed water buffer reservoir for the boiler system.

The tank can also be delivered with steam heating to remove oxygen from the water.